

GPIO Terminal Block

IF5, IF30, IF61, IV7

User's Guide

Intermec Technologies Corporation

Worldwide Headquarters

6001 36th Ave.W.

Everett, WA 98203

U.S.A.

www.intermec.com

The information contained herein is provided solely for the purpose of allowing customers to operate and service Intermec-manufactured equipment and is not to be released, reproduced, or used for any other purpose without written permission of Intermec Technologies Corporation.

Information and specifications contained in this document are subject to change without prior notice and do not represent a commitment on the part of Intermec Technologies Corporation.

© 2007-2010 by Intermec Technologies Corporation. All rights reserved.

The word Intermec, the Intermec logo, Norand, ArciTech, Beverage Routebook, CrossBar, dcBrowser, Duratherm, EasyADC, EasyCoder, EasySet, Fingerprint, i-gistics, INCA (under license), Intellitag, Intellitag Gen2, JANUS, LabelShop, MobileLAN, Picolink, Ready-to-Work, RoutePower, Sabre, ScanPlus, ShopScan, Smart Mobile Computing, SmartSystems, TE 2000, Trakker Antares, and Vista Powered are either trademarks or registered trademarks of Intermec Technologies Corporation.

There are U.S. and foreign patents as well as U.S. and foreign patents pending.

Document Change Record

This page records changes to this document. The document was originally released as Revision 001.

Version Number	Date	Description of Change
002	7/2010	Revised to include new information for connecting to the IV7 reader.


Contents

About the GPIO Terminal Block	7
What You Need	7
About the Terminal Block Connections	8
About the Input, Output, and Power Terminal Connections	8
Installing the Terminal Block	10
Connecting To the IF5, IF30, and IF61 Readers	12
About the Reader GPIO Interface	12
Connecting Devices to the Input Terminals	12
Reader Powered Input	14
Isolated Input Interface	15
Open Collector Input Interface	16
Connecting Devices to the Output Terminals	17
Switching the High Side Using Reader Power	18
Switching the Low Side Using Reader Power	19
Switching the High Side Using External Power	20
Driving a DC Relay To Control an AC Load	21
Connecting Devices to the Power Terminal	21
Sample System Diagram	22
Connecting To the IV7 Vehicle-Mount Reader	23
Where to Go From Here	24
Specifications and Pinouts	24

Contents

About the GPIO Terminal Block

Use the GPIO terminal block (P/N 203-726-002) to connect industrial controls such as motion sensors or lights to Intermec RFID readers.

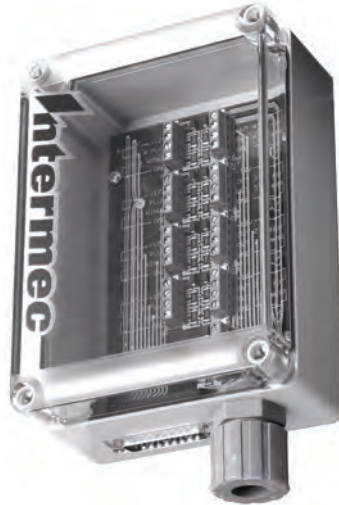

GPIO Terminal Block

What You Need

You connect the terminal block to the reader with a GPIO cable:

- For IF5, IF30, and IF61, use Intermec P/N 236-057-001.
- For IV7, use Intermec P/N 236-089-001. This cable also connects the IV7 to a host PC.

You supply your own cables or wiring for your industrial controls.

For more information on connecting industrial controls to the terminal block, see **“Connecting To the IF5, IF30, and IF61 Readers” on page 12.**




Note: Using the terminal block with the IV7 Vehicle-Mount Reader requires special considerations. For more information, see **“Connecting To the IV7 Vehicle-Mount Reader” on page 23.**

Some Intermec readers can also provide power for your external controls. For more information, see **“Connecting Devices to the Power Terminal” on page 21.**

About the Terminal Block Connections

Connect the terminal block to your Intermec reader through the serial port. Cables from industrial controls are run through the strain relief connector shown in the next illustration and connected to the screw terminals on the main circuit board.

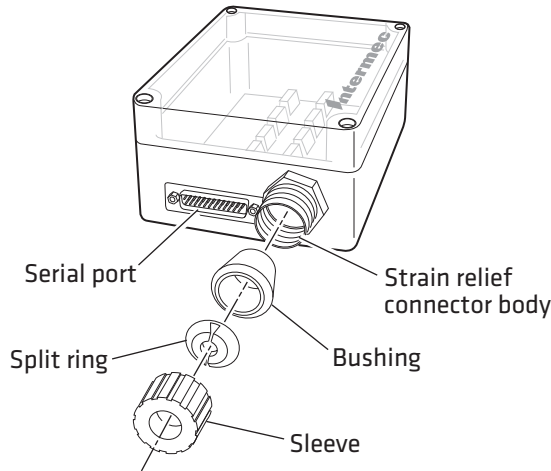

Terminal Block Connections


About the Input, Output, and Power Terminal Connections

The terminal block provides standard screw terminals that you use to connect industrial control wiring to the reader GPIO and power interfaces.



Note: The IV7 cannot provide power to external devices. For more information, see **“Connecting To the IV7 Vehicle-Mount Reader” on page 23.**

The screw terminals are located inside the terminal block on the main circuit board as shown in the next illustration.

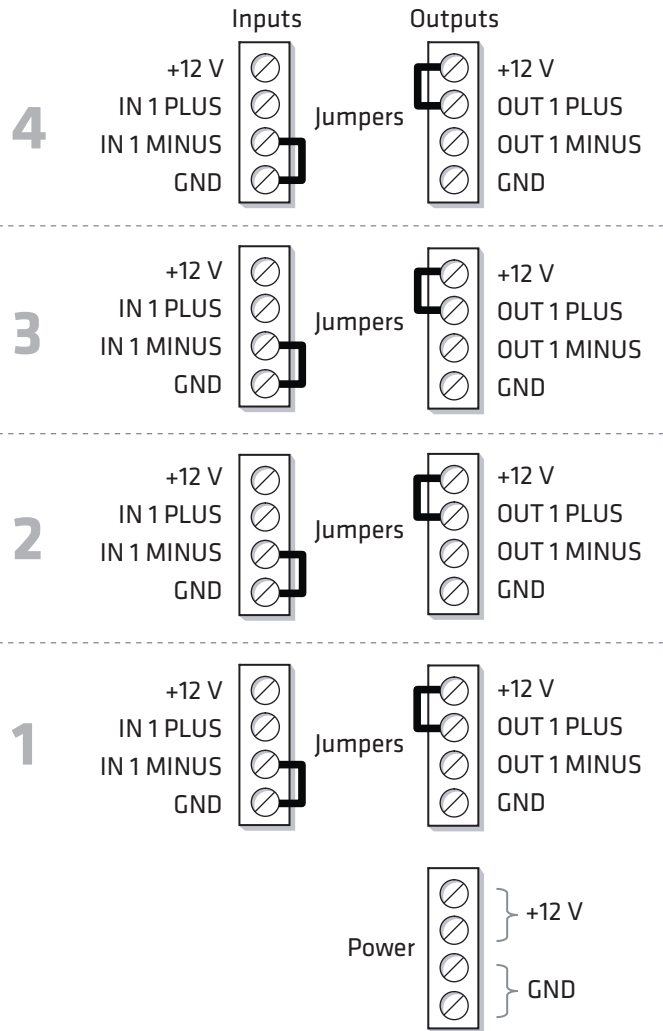

Terminal Connections: This illustration shows the input, output, and power terminal connections on the main circuit board.



Note: To use the terminal block with the IV7 reader, remove the jumpers from the Output terminals. For more information, see [“Connecting To the IV7 Vehicle-Mount Reader” on page 23.](#)

Installing the Terminal Block



Note: For IP54 compatibility, mount the terminal block with the connector side facing toward the floor.

You need these tools to install the terminal block:


- Drill and drill bits appropriate for the mounting surface
- Small straight-slot and Phillips screwdrivers
- Wire crimping and stripping tool




Note: The terminal block includes four #6 x 2-inch wood screws you can use for mounting, or you can supply your own mounting hardware.

To install the terminal block


- 1 Choose a location for the terminal block.
- 2 Drill four mounting holes. Use the included drilling template (P/N 931-008-001).
- 3 Remove the top cover from the terminal block.
- 4 Place the terminal block in the location and secure it to the mounting surface with four appropriate fasteners.

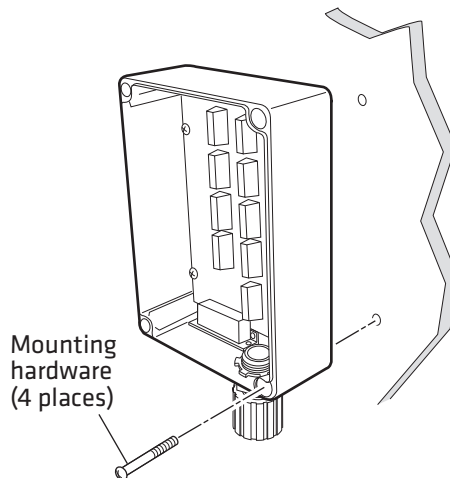

- 5 Route the control wiring through the sleeve, split ring, and bushing, and into the terminal block through the strain relief connector body.

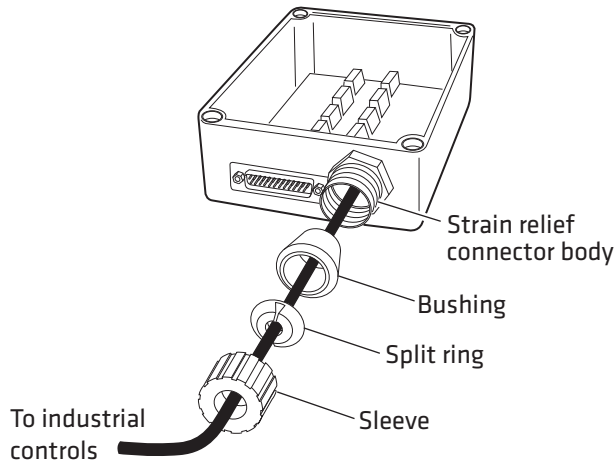

- 6 Connect the control wiring to the appropriate terminals inside the terminal block. For more information, see the next section, **“Connecting To the IF5, IF30, and IF61 Readers.”**
- 7 Install the bushing, split ring, and sleeve on the strain relief connector body (finger tighten only).
- 8 Install the top cover.
- 9 Connect the GPIO cable to the terminal block serial port and to the reader as follows:
 - For the IF61, connect the cable (P/N 236-057-001) to the GPIO port.
 - For the IF5 or IF30, connect the cable (P/N 236-057-001) to the Control Port.
 - For the IV7, connect the cable (P/N 236-089-001) to the Data Port on the IV7 and to the COM port on the host PC.

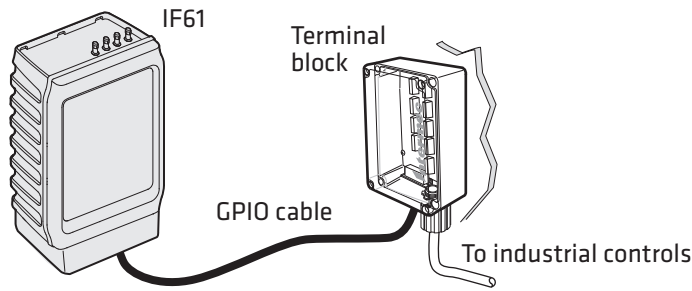

Connecting to the Reader: This example shows an IF61 Fixed Reader connected to the terminal block.

Connecting To the IF5, IF30, and IF61 Readers

This section explains how the terminal block connects to the IF5, IF30, and IF61 reader GPIO interfaces, and how you connect devices to the terminal block input, output, and power terminals.



Note: Connecting the terminal block to the IV7 requires special considerations. For more information and a schematic, see [“Connecting To the IV7 Vehicle-Mount Reader” on page 23.](#)

About the Reader GPIO Interface

The IF5, IF30, and IF61 readers have four general purpose input and output interfaces. Each interface is electrically isolated from the reader and designed for low voltage DC loads. The readers can also supply 12 VDC at 0.5 A to external devices.


For more information, see [“About the Input, Output, and Power Terminal Connections” on page 8.](#)

Connecting Devices to the Input Terminals

Each input terminal has four terminal posts:

- 12 V
- +Input
- -Input
- Gnd (Ground)

The input terminals access the four general purpose inputs on the reader. Each of the inputs is compatible with input signals of 10 to 48 VDC. Each input terminal includes a green indicator LED that lights up when the input circuit is energized.

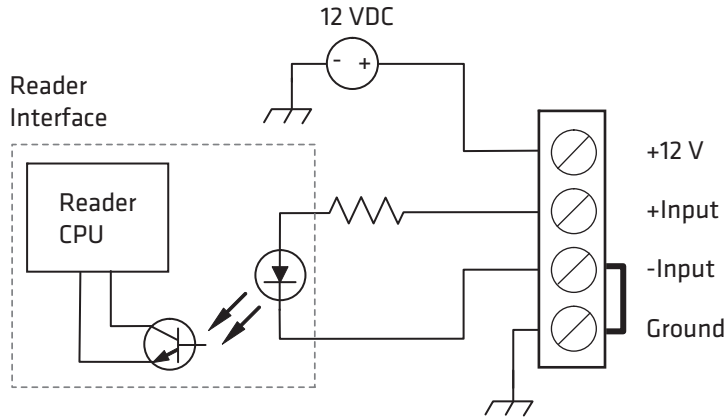

Input Terminal Schematic: This illustration shows a reader input terminal. The -Input post is shorted to the Ground post by a jumper.

How the inputs are used depends on the RFID application being used in the system. Typically, the reader senses input from an external control like a switch and then starts a Read operation. You need to coordinate the wiring of input controls with the software developer.


There are three ways to connect input controls to the terminal block:

- Supply the input interface with power from the reader.
- Isolate the reader from the input power source.
- Use an open collector solid-state drive from a remote device to control the inputs.

For more information, see the next examples.

Reader Powered Input

Supplying the input interface with power from the reader is the easiest way to connect a control to an input terminal. Each input terminal ships with a jumper wire between the -Input and Ground posts. If the input device is a switch closure, connect the other side of the switch to the +12 V post as shown in the next illustration.

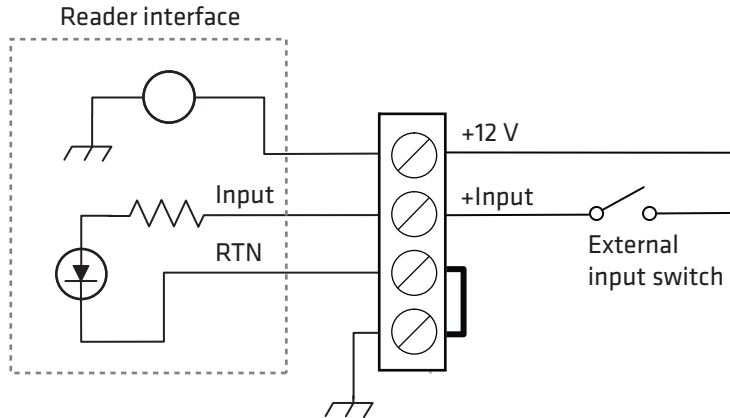


Reader Powered Input

Isolated Input Interface

Use this method to minimize noise caused by distance or grounding characteristics. The isolated input avoids induced noise by referencing a remote input to chassis return of the reader.

Use a twisted pair cable to connect the input device to the terminal block to further suppress noise. Remove the jumper between the -Input and Ground posts so there is no connection to either the 12 VDC power from the reader or the reference chassis ground. The next illustration shows how this input method is wired.

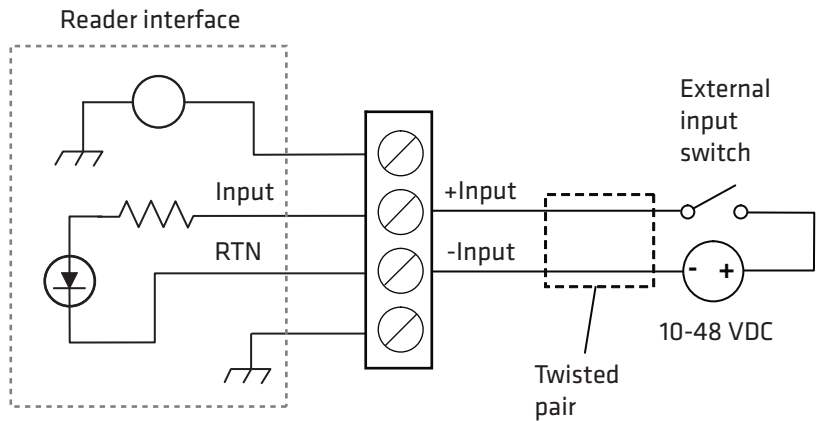


Isolated Input Interface

Open Collector Input Interface

You can connect the input to an open collector interface of an external device, which suggests that the grounds are tied together for the two systems. Because the common ground can be a source of input noise, follow good grounding practices for both the reader and the input device.

The illustration shows the reader providing power to the pull-up resistor for the open collector. Remove the jumper between the -Input and Ground posts, and use it to short out the +12 V and +Input posts.

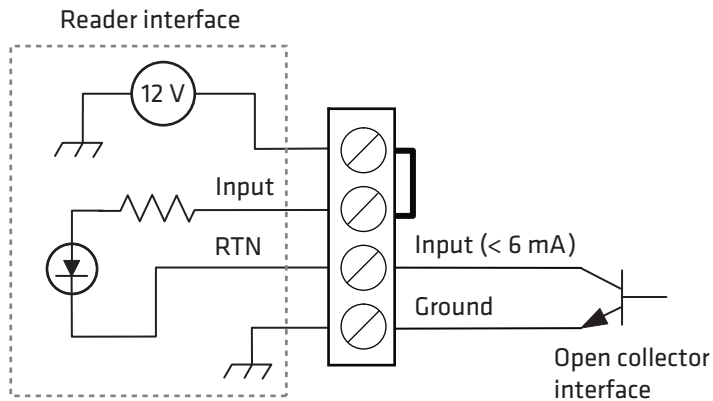


Open Collector Input Interface

Connecting Devices to the Output Terminals

Each output terminal has four terminal posts:

- 12 V
- +Output
- -Output
- Gnd (Ground)

The output terminals allow you to access the four general purpose outputs on the reader. Each output is optically isolated from the reader, polarized, and rated for 5 to 48 VDC at 0.25 A. All reader outputs include internal thermal fuses that trip if the load exceeds 0.25 A, and the fuses are self-recovering once the excessive load is removed.

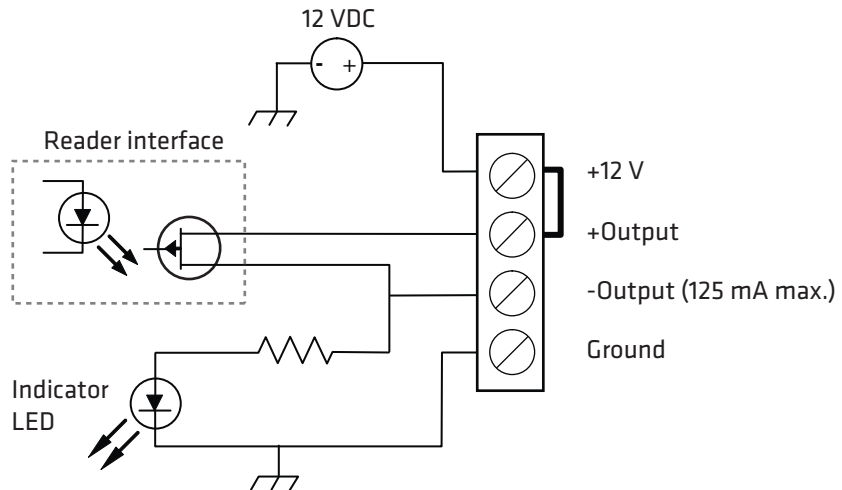

Reader Output Terminal Schematic: This illustration shows an output terminal. The +Output and +12 V posts are shorted by a jumper.

Each terminal block output terminal includes a green indicator LED that you can enable or disable depending on system requirements.

How the outputs are used depends on the RFID application software being used in the system. For example, the outputs can control indicator lamps that indicate good reads or errors. You need to coordinate the wiring of any output controls with the software developer.

Because the outputs are optically isolated, you can configure each one to switch the high side or the low side of the load. You can power the load directly from the reader or from an external power supply.

The next examples illustrate several ways to connect controls to the output terminals:


- Switching the high side, with the load powered by the reader.
- Switching the low side, with the load powered by the reader.
- Switching the high side, with the load powered externally. If the load being switched requires more than 6 W, you need to provide external power.
- Driving a DC relay that controls an AC load.

Switching the High Side Using Reader Power

The terminal block is factory configured for high side switching, with power coming from the reader. Only the single output being switched is affected if the interface cable fails. This configuration supports many indicator lamp applications.

By default, the LED indicator for each output terminal is wired in parallel with the output load, giving visual feedback to users when the output from the reader has changed state.

Each output terminal includes a jumper that shorts the +12 V and +Output posts. Connect the output load to the -Output and Ground posts as seen in the next illustration.

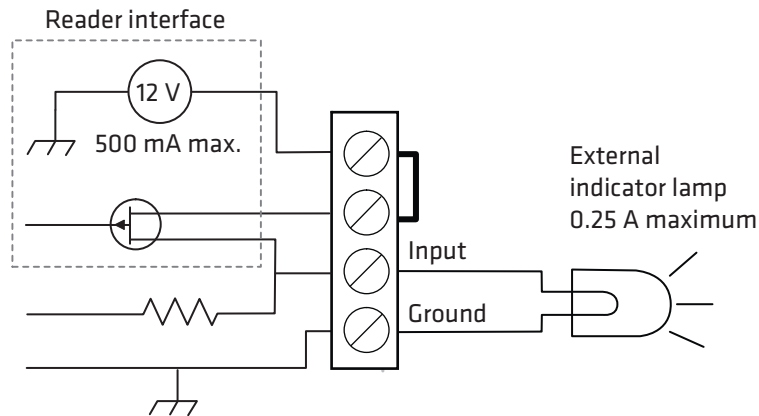


Switching the High Side

Switching the Low Side Using Reader Power

For low side switching applications, lamp power is routed to all the lamps in common and the low side of the load is routed to the switch.

To configure an output terminal for low side switching, use the jumper to short the -Output and Ground posts together as shown in the next illustration.

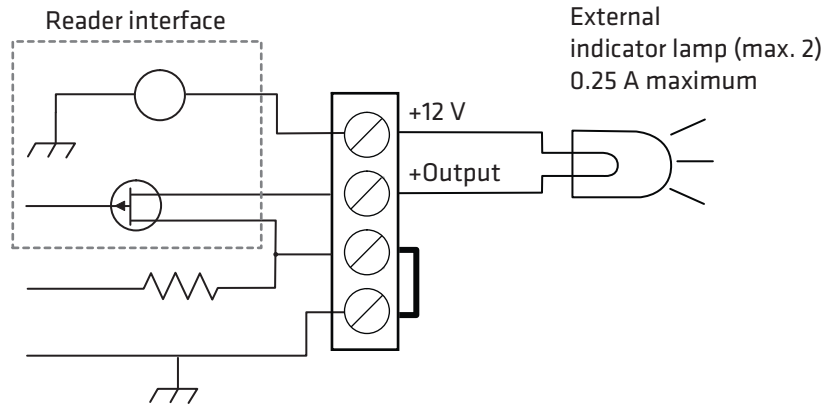

Switching the Low Side of the Output Load




Note: In this configuration the indicator LED for the output terminal is disabled and may create some confusion with maintenance activity.

Switching the High Side Using External Power

To switch the high side of an externally powered load, remove the output terminal jumper. You should also connect the reader ground to the ground system of the external power supply, which enables the output terminal LED (not shown in the illustration). When the output is turned on, the LED lights up.

Connect the external power source as shown in the next illustration.

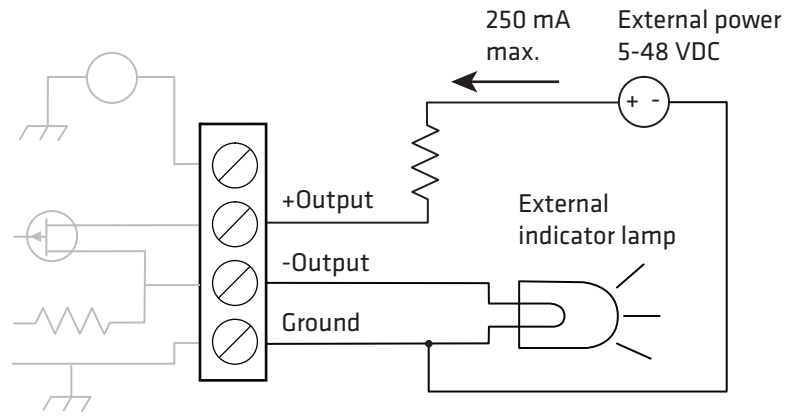


Switching the High Side With External Power



Note: If the reader ground is not connected to the external power ground, the output terminal LED will behave unpredictably, but will light up if there is a sneak path in the chassis ground.

Driving a DC Relay To Control an AC Load

The reader outputs can only switch DC loads, but can drive relays that control AC loads as seen in the next illustration.

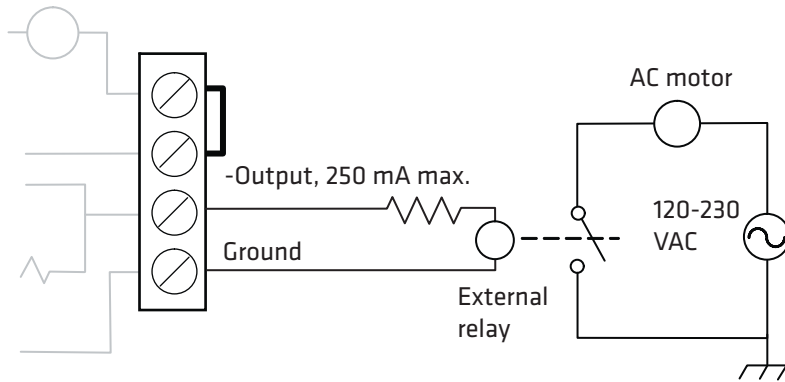

Driving a DC Relay: The external relay provides dry contacts for controlling the AC motor.



Note: In many installations, the relay and AC wiring must be placed in an enclosure that meets local fire code regulations.

Connecting Devices to the Power Terminal

The power terminal provides access to DC power from the reader (except for IV7). The GPIO interface provides a total of 12 VDC at 0.5 A for powering external inputs and loads, eliminating the need for an external DC supply and simplifying the system installation.

Each GPIO interface power has an internal thermal fuse that trips if the load exceeds 0.3 A, and the fuse is self-recovering once the excessive load is removed.


The **total** load on the GPIO interface power must stay within the 0.5 A limit. When you design a system that uses this supply, be sure to complete a power budget assessment to ensure that the supply is adequate for the system.

On the power terminal, two posts are available for +12 VDC and Ground. These posts are tied to each of the +12 V and Ground posts on the input and output terminals.

If your system needs more than +12 VDC at 0.5 A, you can connect an external power supply to the +12 V and Ground posts on the power terminal. The external supply will power the external loads, and that power will be available at all +12 V posts on the input and output terminals.

Sample System Diagram

This illustration shows how to connect a system that uses position detection sensors as inputs and indicator lamps as outputs. All are connected to the power terminal on the terminal block and powered by the reader.

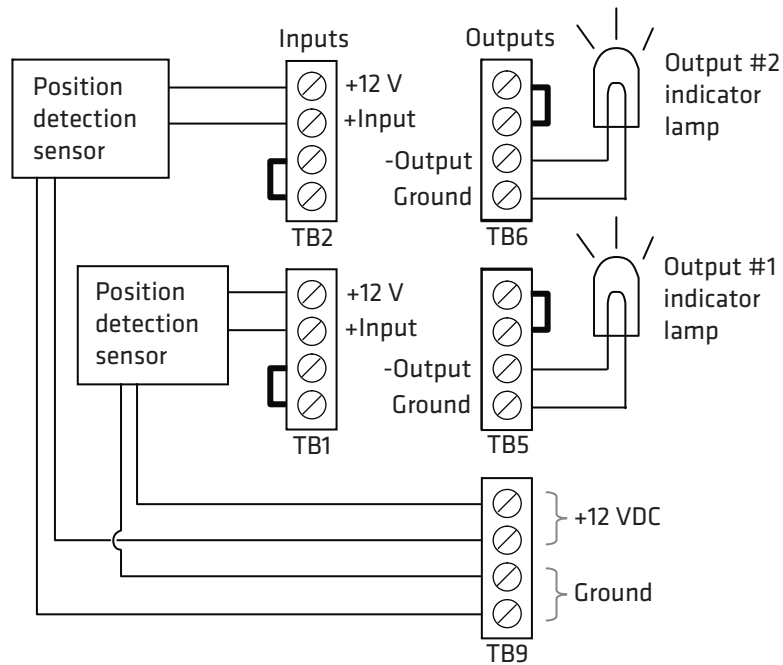


Sample System Diagram

Connecting To the IV7 Vehicle-Mount Reader

Connecting GPIO devices to the IV7 reader requires special considerations. The IV7 GPIO:

- inputs are limited to 40 mA **total**.
- outputs are limited to 50 mA **total**.
- does **not** provide 12 VDC for powering external devices.

To connect the terminal block and GPIO devices to the IV7, use a voltage conditioning network as shown in this sample schematic:

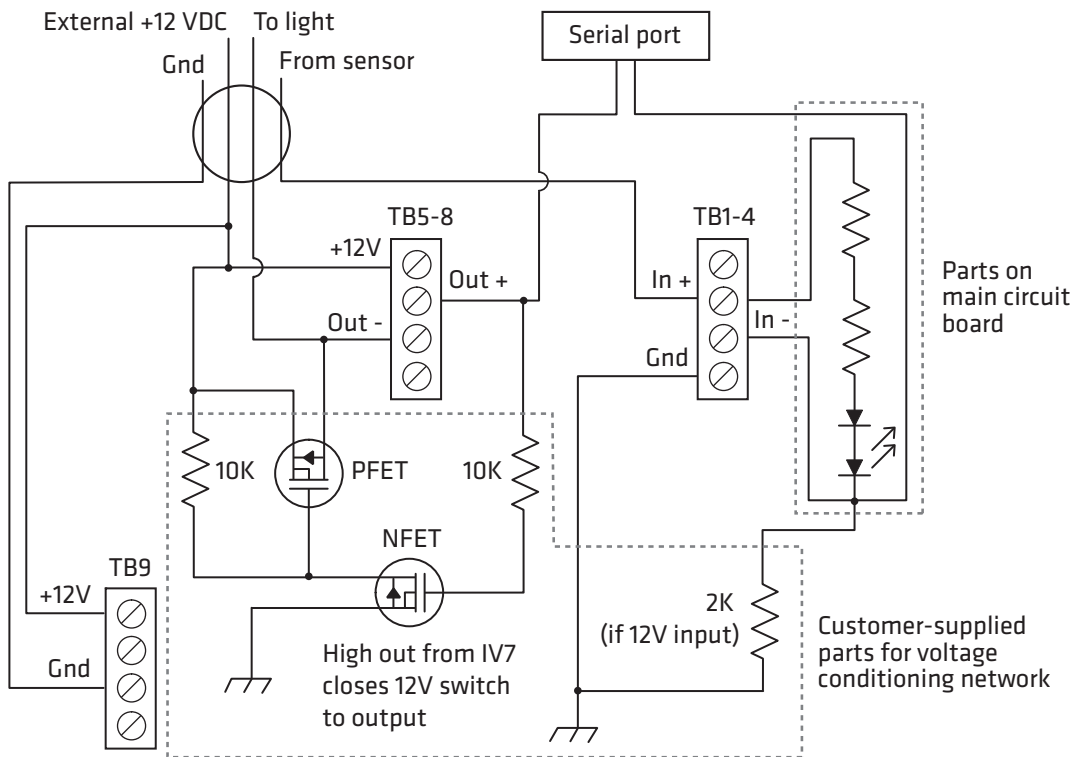

Sample Voltage Conditioning Network for Connections to the IV7



Caution

The IV7 is connected to the GPIO terminal block only through the Out PLUS and In MINUS terminals. Do not connect the IV7 to any other terminals in the terminal block.

Where to Go From Here


For information on configuring and operating the reader, see the reader user's manual.

You may need additional information when working with the reader in your data collection system. To download PDF files of our current manuals, visit www.intermec.com and choose **Support** > **Manuals**.


Specifications and Pinouts

Dimensions:	17.4 cm x 12.4 cm x 7.4 cm (6.88 in x 4.88 in x 2.94 in)
Weight:	510 gm (1.12 lbs)
Input terminal ratings:	10 to 48 VDC
Output terminal ratings:	5 to 48 VDC @0.25 A
Power terminal ratings:	+12 VDC @0.5 A (total for all external loads)
Serial interface:	DB25
Operating temperature:	25°C to 70°C (-13°F to 158°F)
Operating humidity:	10 to 90%, non-condensing
Environmental rating:	IP54. Terminal block must be mounted with the connector side facing down.

Pinouts for Terminal Block Serial Port

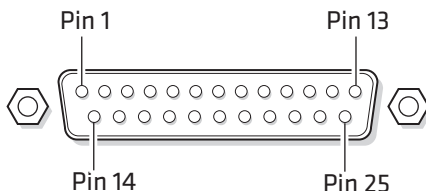


Pinouts for IF5/IF30 Control Port and IF61 GPIO Port

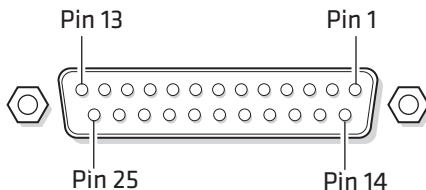

Port Pin Assignments for Terminal Block, IF5, IF30, and IF61

Pin	Description	Active Polarity
1	-Input 1	Low-RTN
2	-Input 2	Low-RTN
3	-Input 3	Low-RTN
4	-Input 4	Low-RTN
5	Ground	
6	Ground	
7	+Output 1	High, 10 to 48 V
8	Ground	
9	+Output 2	High, 10 to 48 V
10	Ground	
11	+Output 3	High, 10 to 48 V
12	Ground	
13	+Output 4	High, 10 to 48 V
14	+Input 1	High, 10 to 48 V (10 to 36 V for IF61 only)
15	+Input 2	High, 10 to 48 V (10 to 36 V for IF61 only)
16	+Input 3	High, 10 to 48 V (10 to 36 V for IF61 only)
17	+Input 4	High, 10 to 48 V (10 to 36 V for IF61 only)
18	12 VDC	
19	-Output 1	Low-RTN
20	12 VDC	
21	-Output 2	Low-RTN
22	12 VDC	
23	-Output 3	Low-RTN
24	12 VDC	
25	-Output 4	Low-RTN

Pinouts for IV7 Data Port

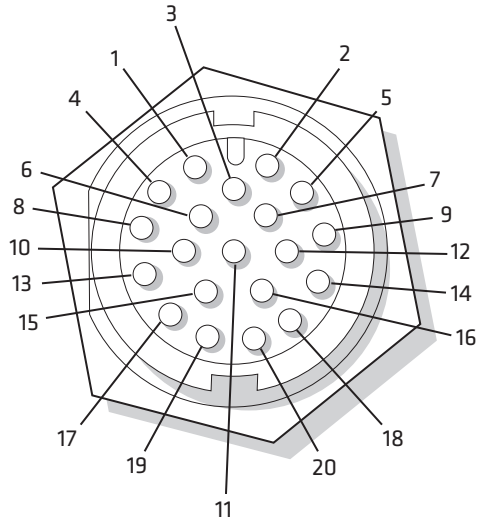

Data Port Pin Assignments for IV7

Pin	Description	Pin	Description
1	TXD from IV7	11	GPIO Return 1
2	RXD to IV7	12	GPIO Return 2
3	Ground	13	GPIO Return 3
4	CTS from IV7	14	GPIO Return 4
5	RTS to IV7	15	GPIO Return 5
6	+5VDC	16	NC
7	GP Input 0	17	GP Output 0
8	GP Input 1	18	GP Output 1
9	GP Input 2	19	GP Output 2
10	GP Input 3	20	GP Output 3



Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2010 Intermec Technologies
Corporation. All rights reserved.



GPIO Terminal Block User's Guide



P/N 934-001-002