


Saving Changes and Exiting the System Setting Screen

The user's manual (page 39) incorrectly describes how to save your changes and exit the System Setting screen. Specifically, the manual directs you to press the **S1** and **Esc** keys simultaneously, when you should press and release **S1** and then press and release **Esc**.

To save (or discard) changes and exit the System Setting screen

- 1 Make your changes in a screen, such as the Time screen.
- 2 To save your changes, press **Enter** to return to the System Setting screen. (To discard your changes, press **S1** and then **Esc** to return to the System Setting screen.)
- 3 Make sure the Lock area is blank. If there is an L or U in the Lock area, press **Lock** to clear the L or U.
- 4 Press **S1** and then **Esc** to return to the Setup screen.
- 5 Press **S1** and then **Esc** to return to the top level screen (shown in the previous section).

Your changes are now saved to memory. If you want to return to your MCL application, use the **▶** key to select the **MCL** icon and press **Enter**.

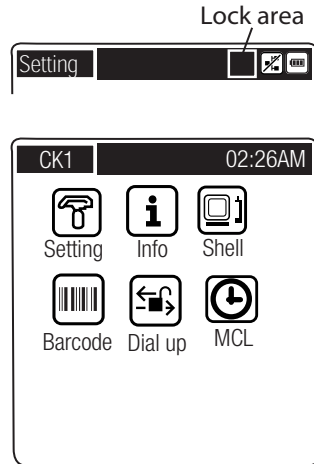

Setup Screen



Technologies Corporation
6001 36th Avenue West
Everett, WA 98203
U.S.A.

www.intermec.com

© 2004 Intermec Technologies Corp.
All Rights Reserved

New Information About the CK1

This document explains four tasks that have changed since the *CK1 Handheld Computer User's Manual* (P/N 073769-001) was printed:

- What happens when you turn on the CK1
- How to respond to the “Keep Ramdisk?” prompt
- How to enter the System Setting screen
- How to save changes and exit the System Setting screen

Place this document inside your copy of the user's manual.

Turning on the CK1



Follow these steps to turn on the CK1.

To turn on the CK1

- 1 Press the **Power** key to turn on the CK1.
- 2 If the “Keep Ramdisk?” prompt appears, do **not** press **F1**. Press any other key.


You press **F1** only if you rebooted because the CK1 application locked up and you need to recover lost data. For details, see the next section, “Responding to the ‘Keep Ramdisk?’ Prompt.”

The screen clears and remains blank for about 30 seconds while the CK1 formats the RAM disk. The message “RAMDISK created” appears.

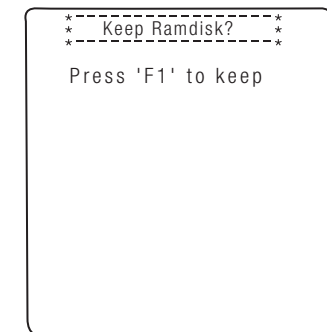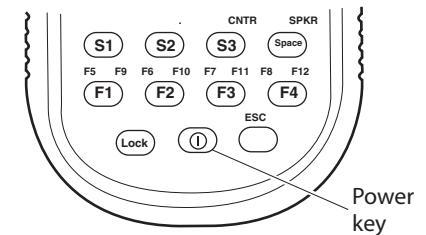

“Keep Ramdisk?” Prompt

The CK1 continues to boot. The Intermec logo screen appears, followed by the MCL logo screen. Finally, the CK1 automatically launches your main application.

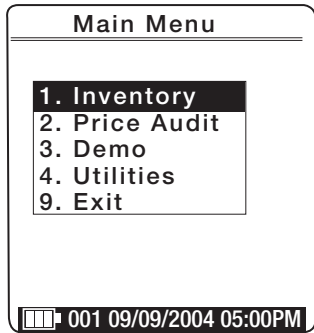

MCL Demo Screen

This screen shows the MCL demo, a simple inventory application that is loaded on your CK1 if you did not order a custom application. If you ordered a custom application, the CK1 automatically launches it and your screen looks different than the one shown here.

You can use ◀ ▲ ▼ ▶ keys to move through the menu. You can also use the number keys to select a menu option.



Note: The user's manual incorrectly shows the top level screen (shown in "Entering the System Setting Screen" later in this document) as the screen that appears when the CK1 finishes booting. Due to a firmware upgrade, the CK1 now bypasses that screen and automatically launches your main application.

Responding to the "Keep Ramdisk?" Prompt

The "Keep Ramdisk?" prompt lets you save any data held on the RAM disk, preventing the RAM disk from being formatted as usual during the boot process. This prompt appears in four situations:

- When you turn on the CK1 for the first time
- When you turn on the CK1 after losing battery power
- When you hard reset the CK1
- When you cold boot the CK1



Note: You "cold boot" the CK1 by performing these steps: Turn off the CK1. Hold **5** down while you press and release **Power**. The red light turns on. Release **5**. Press and release **F1**. Press and release **2**. Press **Power**. The CK1 cold boots.

You press **F1** only if the CK1 application locked up and you need to recover any data held on the RAM disk. In that situation, you could boot or hard reset the CK1 and then press **F1** when you see the "Keep Ramdisk?" prompt.

Every other time you see the "Keep Ramdisk?" prompt, you do not press **F1** because there is no reason to save the data held on the RAM disk. By pressing any key except **F1**, you allow the CK1 to format the RAM disk.


Entering the System Setting Screen

You configure CK1 features, such as the date and time, from the System Setting screen.

The user's manual (page 24) describes how to enter the System Setting screen. All the steps in that procedure are correct, except for Step 1. Perform the following steps instead of Step 1.

To enter the System Setting screen

- 1 Turn on the CK1. When the CK1 finishes booting, it launches your main application, as described in "Turning on the CK1."
- 2 Press **9** to select **Exit**. Or use the ▼ key to select **Exit** and then press **Enter**. The MCL logo screen appears.
- 3 Press **F1** to display the MCL System Menu.
- 4 Use the ▼ and ▶ keys to select the **Exit MCL** icon, and then press **Enter**. You are prompted to confirm that you want to quit.
- 5 Press **Enter** to accept the **Ok** button. The top level screen appears.
- 6 Follow the directions in the CK1 user's manual on page 24, starting with Step 2.

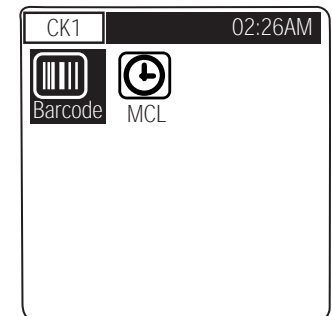

Top Level Screen