

P/N 067675-001

## ***Base Station Wall-Mount Bracket Instruction Sheet***


---

Use the wall-mount bracket to mount your base station to a wall. By mounting the base station to a wall, you can improve the communication between the base station and the scanner. Make sure that nothing obstructs the signal between the base station and the scanner.

You will need to provide two screws, a screwdriver, a drill, and a drill bit.

To mount the base station

1. Using the wall-mount bracket as a template, mark and drill two holes in the wall.
2. Using the two mounting screws, attach the wall-mount bracket to the wall.
3. Slide the base station onto the wall-mount bracket with the bracket going into the mounting slot on the base station. Slide the base station up until the latch hooks into the top of the base station.

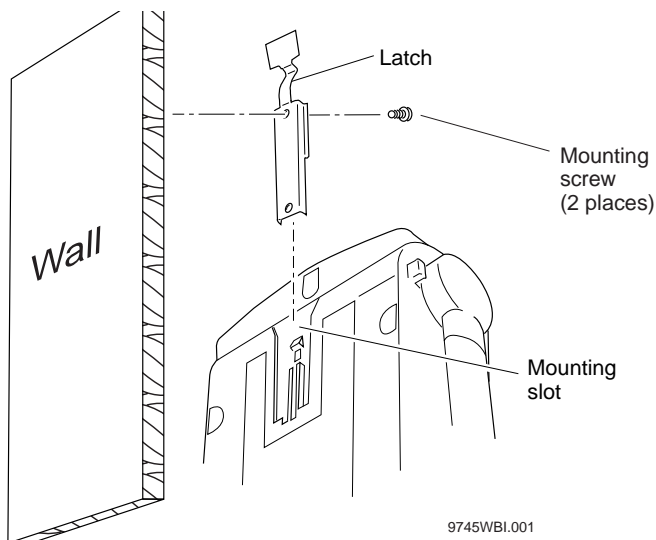

9745WBI.001